

# **INSTRUCTION MANUAL**



Model: Handling Dispenser for Buller 600

Carefully check if the shipping carton is damaged before unpacking. Please check the items according to the standard package list. If you have any questions, please preserve serial no. & shipping carton and contact your dealer for quick solution.

| Model           | Handling Dispenser for Buller 600                      |
|-----------------|--|
|                 | Buller 600 - DSP  Buller 600 - DSP  Handling Dispenser |
| Standard        | Handling Dispenser with DB9 Connector                  |
| package<br>list | Dispensing Kit (Optional)                              |

| Position | Designation   | Material | Position | Designation | Material | Position | Designation   | Material |
|----------|---------------|----------|----------|-------------|----------|----------|---------------|----------|
| 1        | Cover         | PC       | 4        | Button      | PC       | 7        | Sinker        | SS304    |
| 2        | Nozzle        | SS304    | 5        | Handle      | PC       | 8        | DB9 Connector | -        |
| 3        | Nozzle holder | Silicone | 6        | Tube        | -        |          |               |          |

<sup>\*</sup> The dispenser is made of PC (Polycarbonate), which is NOT autoclavable. Please keep it away from incompatible materials.

<sup>\*</sup> Nozzle, nozzle holder, tube and sinker are made of SS304 and silicone, both of which are autoclavable.

<sup>\*</sup> Tube material please refer to next page.

#### • Tube Size & Material

| Tubing | ID (mm) | Wall Thickness (mm) |
|--------|---------|---------------------|
| 16#    | 3.1     | 1.6                 |
| 25#    | 4.8     | 1.6                 |
| 17#    | 6.4     | 1.6                 |

| Material     | TYGON S3™ E-3603        | Biosicon                          | PHARMED® BPT                               |
|--------------|-------------------------|-----------------------------------|--|
| Application  | Laboratory applications | Biocompatibility & GMP compliance | Biocompatibility & sensitive bioprocessing |
| Autoclavable | Yes                     | Yes                               | Yes  |

### Installation


#### Handling Dispenser for Buller 600

#### (1) Nozzle and sinker assembly

Insert the nozzle and sinker into each end of silicone tube.

Make sure both components are securely fitted to prevent disconnection during operation.

#### (2) Assemble the handling dispenser

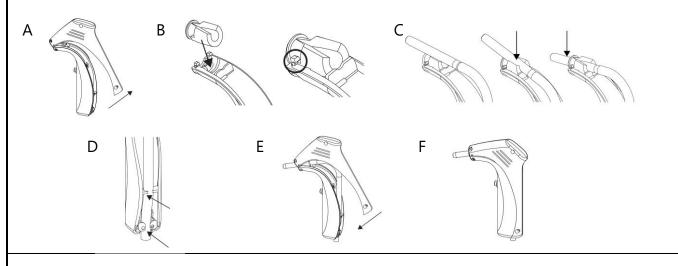

- A. Open the cover from the bottom of the dispenser, as shown in the figure.
- B. Insert the nozzle holder into the handle. Make sure it is fully pressed in and securely latched by the hook to prevent it from falling off.

  \* Nozzle and nozzle holder can be sterilized together and secure into handle.
- C. Secure the nozzle into the holder by first pressing in the back end, then the front.
- D. Press the tube into the clamps in handle.
- E. Engage the cover with the hook as shown, then press it toward the handle to ensure a secure fit.
- F. Complete installation.

#### (3) Connecting and Operating the Dispenser with the Peristaltic Pump

See the INSTRUCTRION MANUAL of Dispensing Peristaltic Pump 4. Installation, (4) Dispenser and Foot Switch Connection.

### **Maintenance**

- A. The whole handling dispenser, except for items of dispensing kit, is NOT autoclavable. Please clean the surface with pure water or 75% ethanol.
- B. Silicone tube and silicone nozzle holder are consumables. It is recommended to replace them as needed to ensure proper operation.
- C. In case of any issues with instrument, please contact the manufacturer or your service agent for assistance. Do NOT disassemble the handle improperly.

## **Troubleshooting**

| Problem      | Reason and Solution  |  |  |
|--------------|--|--|--|
|              | Connector does not plugger in → Plug the connector.              |  |  |
|              | Mode error → Set control mode of Buller 600 to external control. |  |  |
| Fail to work | • Botton failure → Contact distributor for assistance.           |  |  |
|              | • Connector failure → Contact distributor for assistance.        |  |  |
|              | • PCB failure → Contact distributor for assistance.              |  |  |

## **Ordering Information**

| 185600-10    | Handling Dispenser, DB9 connector, 2 m   |
|--------------|--|
| 185600-51-16 | Dispensing Kit (16#) for Handling Dispenser (include nozzle, holder, sinker, and tubing) |
| 185600-51-17 | Dispensing Kit (17#) for Handling Dispenser (include nozzle, holder, sinker, and tubing) |
| 185600-51-25 | Dispensing Kit (25#) for Handling Dispenser (include nozzle, holder, sinker, and tubing) |

| 185600-48 | TYGON S3 <sup>TM</sup> E-3603 Tubing, 16#, 15 m / box  |
|-----------|--|
| 185600-53 | TYGON S3 $^{\text{TM}}$ E-3603 Tubing, 17#, 15 m / box |
| 185600-54 | TYGON S3 $^{\text{TM}}$ E-3603 Tubing, 25#, 15 m / box |
| 185600-55 | Biosicon Tubing, 16#, 15 m / box                       |
| 185600-56 | Biosicon Tubing, 17#, 15 m / box                       |
| 185600-57 | Biosicon Tubing, 25#, 15 m / box                       |
| 184100-48 | PHARMED® BPT Tubing, 16#, 7.5 m / box                  |
| 184100-49 | PHARMED® BPT Tubing, 17#, 7.5 m / box                  |
| 184100-50 | PHARMED® BPT Tubing, 25#, 7.5 m / box                  |